


WOOD CHIPPER

User Manual

SAFETY AND OPERATION INSTRUCTIONS

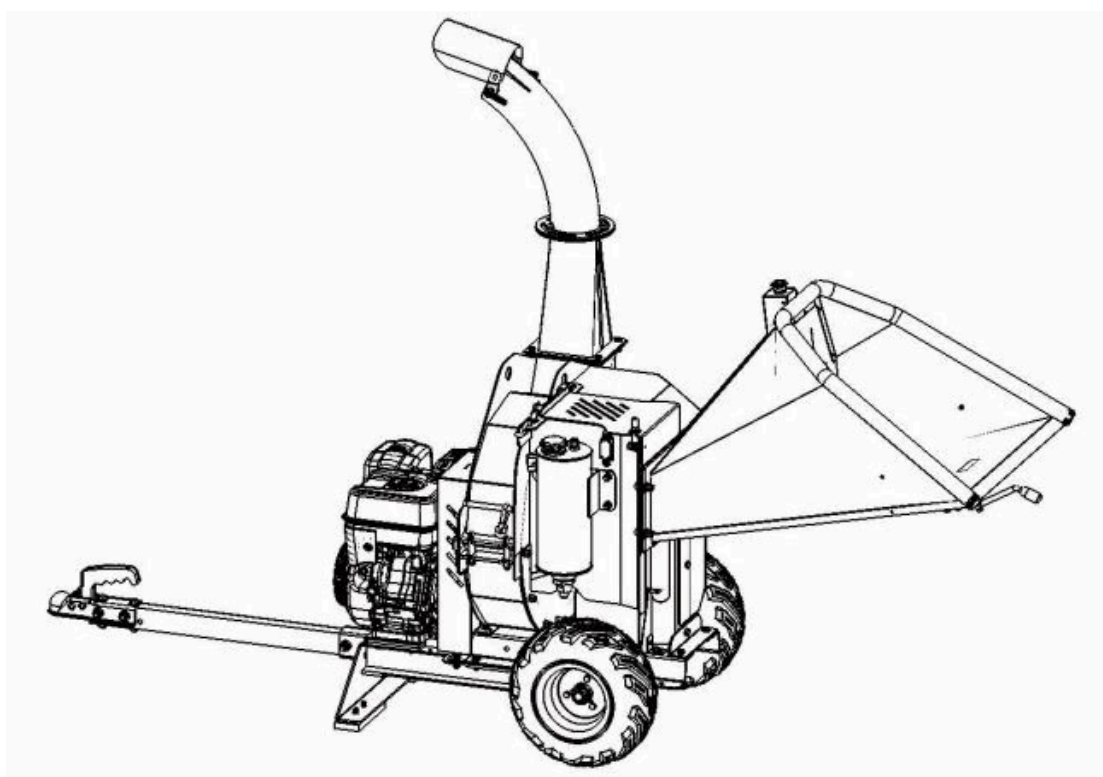

CEDRB05PRO-HE

IMPORTANT: Read safety rules and instructions carefully before operating equipment.
Keep the manual for future reference.

Original manual



Table of Contents

PART I: General Safety Rules	2
PART II: Familiar with the Wood Chipper	7
PART III: Operating the Wood Chipper	9
PART IV: Maintaining the Wood Chipper	12
PART V: Troubleshooting and Parts List	14

Conventions used in this manual

WARNING

This indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION

This indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE


This information is important in proper using of your machine. Failure to follow this instruction could result in damage to your machine or property.

Additional Information and Potential Changes

We reserve the right to discontinue, change, and improve its products at any time without notice or obligation to the purchaser. The descriptions and specifications contained in this manual were in effect at printing. Equipment described within this manual may be optional. Some illustrations may not be applicable to your machine.

PART I: General Safety Rules

Safety Labels Found on Your Unit

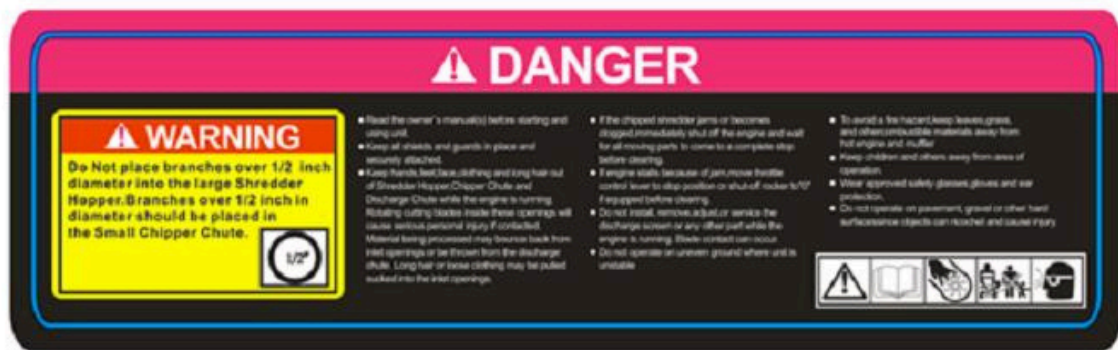

WARNING

Read this Safety & Operating Instructions manual before you use the Wood Chipper. Become familiar with the operation and service recommendations to ensure the best performance of your machine.

Propose

CAUTION

This machine is designed solely to chip wood and must not be used for any other purpose. It should only be used by trained operators who are familiar with the content of this manual. It is potentially hazardous to fit or use any parts other than your dealer parts. The company disclaims all liability for the consequences of such use, which in addition voids the machine warranty.

Before using the wood chipper

NOTICE

- A. Operators must be fully trained before using this machine.
 - B. User Manual is read and understood.
 - C. Machine is positioned on level ground, all guards are fitted and in good condition.
 - D. Blades are in good condition and secure. All blades are sharpened or replaced in sets.
 - E. All fasteners are checked for tightness.
 - F. Only WOODEN materials free of nails etc. are fed into the machine.
 - G. Emergency stop wire is rightly connected and the switch is functional.
 - H. Fire extinguisher is available on site.
-

When using the wood chipper

NOTICE

- A. Always feed from the side.
 - B. It is better to have a second trained operator within easy reach of the machine.
 - C. Maintain strict discipline at all times and service machine at specified periods.
 - D. Note direction of discharge chute and if necessary note the wind direction to prevent debris from being blown into highway or where it could affect members of the public.
 - E. DO NOT put any part of your body into the in-feed chute while the machine is running.
 - F. DO NOT operate the machine whilst under the influence of alcohol or drugs.
-

- G. **DO NOT** operate inside a building or confined space or Climb on the in-feed chute.
-

Protecting Yourself and Those Around You

WARNING

This is a high-powered machine, with moving parts operating with high energy. You must operate the machine safely. Unsafe operation can create a number of hazards for you, as well as anyone else in the nearby area. Always take the following precautions when using this machine:

- A. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people, their property, and themselves.
 - B. Always wear protective goggles or safety glasses with side shields while using the Wood Chipper to protect your eyes from possible thrown debris.
 - C. Avoid wearing loose clothing or jewelry, which can catch on moving parts.
We recommend wearing gloves while using the Wood Chipper. Be sure your gloves fit properly and do not have loose cuffs or drawstrings.
 - E. Wear shoes with non-slip treads when using your Wood Chipper. If you have safety shoes, we recommend wearing them. Do not use the machine while barefoot or wearing open sandals.
 - F. Wear long pants while operating the Wood Chipper.
 - G. Keep bystanders at least 50 feet away from your work area at all times. Stop the engine when another person or pet approaches.
-

Safety for Children and Pets

WARNING

Tragic accidents can occur if the operator is not alert to the presence of children and pets. Children are often attracted to the machine and the chipping activity. Never assume that children will remain where you last saw them. Always follow these precautions:

- A. Keep children and pets at least 50 feet from the working area and ensure they are under the watchful care of a responsible adult.
 - B. Be alert and turn the machine off if children or pets enter the work area.
 - C. Never allow children to operate the Wood Chipper.
-

Safety with Gasoline - Powered Machines

WARNING

Gasoline is a highly flammable liquid. Gasoline also gives off flammable vapor that can be easily ignited and cause a fire or explosion. Never overlook the hazards of gasoline. Always follow these precautions:

- A. Never run the engine in an enclosed area or without proper ventilation as the exhaust from the engine contains carbon monoxide, which is an odorless, tasteless, and a deadly poisonous gas.
-

- B. Store all fuel and oil in containers specifically designed and approved for this purpose and keep away from heat and open flame, and out of the reach of children. Replace rubber fuel
 - C. lines and grommets when worn or damaged and after 5 years of use. Fill the gasoline tank
 - D. outdoors with the engine off and allow the engine to cool completely. Don't handle gasoline if you or anyone nearby is smoking, or if you're near anything that could cause it to ignite or explode. Reinstall the fuel tank cap and fuel container cap securely. If you spill gasoline, do not attempt to start the engine. Move the machine away from the area of the spill and avoid creating any source of ignition until the gas vapors have dissipated. Wipe up any spilled fuel
 - E. to prevent a fire hazard and properly dispose of the waste. Allow the engine to cool completely before storing in any enclosure. Never store a machine that has gas in the tank, or a fuel container, near an open flame or spark such as a water heater, space heater, clothes dryer or furnace. Never make adjustments or repairs with the engine running. Shut
 - F. down the engine, disconnect the spark plug wire, keeping it away from the spark plug to prevent accidental starting, wait 5 minutes before making adjustments or repairs. Never tamper with the engine's governor setting. The governor controls the maximum safe operation speed and protects the engine. Over-speeding the engine is dangerous and will cause damage to the engine and to the other moving parts of the machine. If required, see your authorized dealer for engine governor adjustments. Keep combustible substances away
 - G. from the engine when it is hot. Never cover the machine while the muffler is still hot. Do not operate the engine with the air cleaner or the carburetor air intake cover removed. Removal of such parts could create a fire hazard. Do not use flammable solutions to clean the air filter. The muffler and engine become very hot and can cause a severe burn; do not touch.
 - H.
 - I.
 - J.
 - K.
 - L.
-

General Safety

WARNING

Operating this Wood Chipper safely is necessary to prevent or minimize the risk of death or serious injury. Unsafe operation can create a number of hazards for you. Always take the following precautions when operating: A. Your Wood Chipper is a powerful tool, not a plaything. Exercise extreme caution at all

times. The machine is designed to Chip Woods. Do not use it for any other purpose.

- B. Know how to stop the Wood Chipper quickly.
 - C. Never operate your unit on a slippery, wet, muddy, or icy surface. Exercise caution to avoid slipping or falling.
 - D. See manufacturer's instructions for proper operation and installation of accessories.
 - E. Never use the machine without ensuring that all guards and shields are in place.
-

- F. Never, under any conditions, remove, bend, cut, fit, weld, or otherwise alter standard parts on the Wood Chipper. This includes all shields and guards. Modifications to your machine could cause personal injuries and property damage and will invalidate your warranty. If the machine start to make an unusual noise or vibrate, shut down the engine, disconnect the spark plug wire, keeping it away from the spark plug to prevent accidental starting, wait 5 minutes for engine to cool down, then inspect for damage. Vibration is generally a warning of trouble. Check damaged parts and clean, repair and/or replace as necessary. Never tamper with safety devices. Check their proper operation regularly. Before performing any maintenance or inspection procedure, shut down the engine, disconnect the spark plug wire keeping it away from the spark plug to prevent accidental starting, wait 5 minutes for machine to cool down. Never allow people who are unfamiliar with these instructions to use the Wood Chipper. Allow only responsible individuals who are familiar with these rules of safe operation to use your machine. Never overload or attempt to chip woods beyond the manufacturer's recommendation. It could result in personal injury or damage to the machine. While using, don't hurry or take things for granted. When in doubt about the equipment or your surroundings stop the machine and take time to look things over.
 - G.
 - H.
 - I.
 - J.
 - K.
 - L.
 - M. Never operate the machine when under the influence of alcohol, drugs, or medication.
 - N. Use the machine only in daylight.
 - O. Stay alert for hidden hazards or traffic.
 - P. Keep all nuts and bolts tight and keep the equipment in good operating condition.
-

A Note to All Users

List of warnings and cautions cannot be all-inclusive. If situations occur that are not covered by this manual, the operator must apply common sense and operate this WOOD CHIPPER in a safe manner. Contact the dealers for assistance in your area.

PART II: Familiar with the Wood Chipper

~~It may be helpful to familiarize yourself with the controls and features of the Wood Chipper.~~
If you have any question, please contact the dealers in your area.

TECHNICAL SPECIFICATIONS

	Recoil Start 13HP/15HP	Electric Start 13HP/15HP
Engine	four strokes	four strokes
Power	Gasoline/petrol	Gasoline/petrol
Chipper Capacity	4CBM/hour to 6CBM/hour	4CBM/hour to 6CBM/hour
Wood Diameter	diameter 120mm 200mm	diameter 120mm 200mm
Permitted wood width	10ml/r,20mpa 0-600rpm,	10ml/r,20mpa 0-600rpm,
Hydraulic pump	MAX 240N*M 4L 16*6.5-8	MAX 240N*M 4L 16*6.5-8
Hydraulic motor	1560mm 2150mm 830mm	1560mm 2150mm 830mm
Oil tank Capacity	285kgs 2250	293kgs 2250
Tire		
Overall Height		
Overall Length		
Width		
weight		
Roller Max RPM		

AUTO-FEED SPEED Bar:



The bar can adjust the rotating speed of the feeding roller(from 0-600RPM).

AUTO-FEED FUNCTION HANDLE:



By operating the handle, there are 3 functions of the feeding roller: Feeding, Reversing, hold-on.

BLADE CONDITION CHECKING:



By Loosing these 4 bolts, can open the chamber to check the condition of blades and fans.

PART III: Operating the Wood Chipper

It may be helpful to better familiarize yourself with the features of your Wood Chipper before beginning the steps outlined in this chapter.

WARNING

- A. Read and understand all instructions, safety precautions, and/or warnings listed in “PART I: General Safety Rules” before operating the WOOD CHIPPER. If any doubt or question arises about the correct or safe method of performing anything found in this manual, please contact the dealers in your area.
 - B. When operating the Wood Chipper, make sure you are standing in the safe operating area (OPERATOR ZONE). You must stay in the safe operating area at all times when the ram is in motion (whether extending or retracting). Never place any part of your body into a position that causes an unsafe operating condition.
 - C. Before loading and operating the Wood Chipper, always wear protective gear, including safety goggles, hearing protection, tight-fitting gloves without draw strings or loose cuffs, and steel-toed shoes.
 - D. Knowing the correct and incorrect methods of Chipping woods. Never using an incorrect or unsafe method.
-

Prepare:

1. Check engine condition
2. Fill engine with right type engine oil and petrol(according engine manual).
3. Check blade condition, make sure the blade is not over-worn and the blade-fan is not blocked.
4. Check the tank if enough hydraulic oil #46(about 2/3 volume).
5. Make sure the feed speed switch in “0” position.
6. Make sure the feed function handle in “STOP” position.
7. Check bolts condition if all fastened.
8. Check kill switch in function.

Starting


1. Position your Wood Chipper on flat, dry ground, make sure the machine cannot be moved.
2. Make sure the fuel shut-off valve is in the “ON” position. Move the choke control lever to
3. the “CHOKE” position (should only be needed if the engine is cold). Move the throttle control lever to the “FAST” position. Recoil Start: Turn the Ignition Switch to the “On”
4. position. Grasp the recoil starter handle and slowly pull until you feel resistance. Let the
5. cord retract a little bit then pull the cord rapidly to start the engine. One or two pulls usually starts the engine.

6. Electric Start: Turn and hold the Key in the start position until Engine starts then let the Key return to run position. Move the choke control lever (if used for cold engine) slowly
7. back to the "RUN" position when the engine is running well. If the Wood Chipper has not been running (cold engine), warm up the engine by running the engine at half throttle
8. for 3 to 4 minutes, then advance the engine throttle control to the maximum speed. Adjust feeding function handle to "Forward" position. Adjust the feed speed bar to proper speed.
- 9.
- 10.

Stopping

1. Adjust feed speed bar to "0" position.
2. Adjust feed function handle to "STOP" position.
3. Move the Throttle Lever to IDLE.
4. Recoil Start: Turn the Ignition Switch to the OFF position.
5. Electric Start: Turn the Key to the OFF position.

Operator Zone

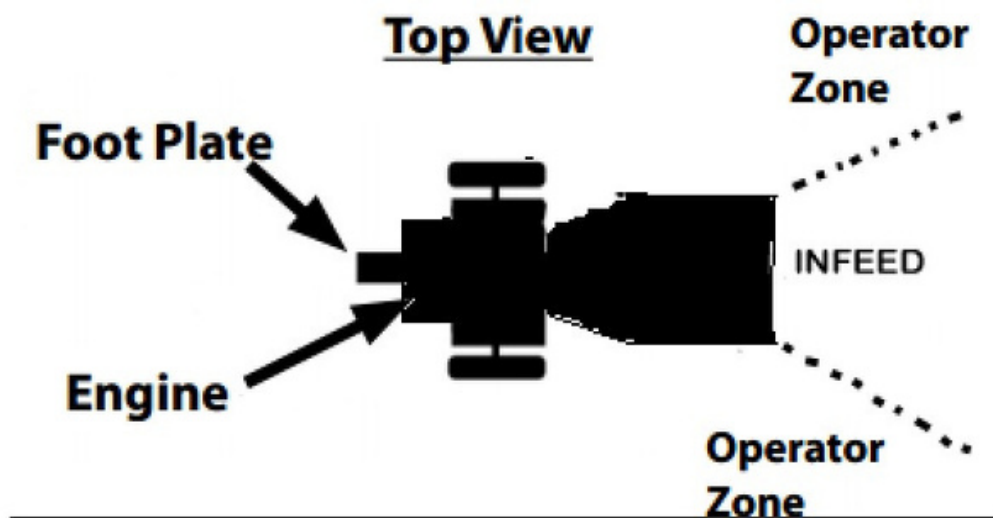

Wood Chipping

NOTICE

Woods' and branches' diameter should be no bigger than 120mm.

WARNING

Do not place your hands into the chute when loading. This is a very UNSAFE method and could result in injury to your hands.

Do not reach or step across the rail while the Wood Chipper is running. This is a very UNSAFE method which could cause personal injury, even death.

When Blocked

If the Roller stops while chipping woods or branches, the engine should be stopped, and take out the woods which stuck the roller, and then restart the engine, and chip again.

PART IV: Maintaining the Wood Chipper

Regular maintenance is the way to ensure the best performance and long life of your machine. Please refer to this manual and the engine manufacturer's user manual for maintenance procedures.

WARNING

Before performing any maintenance procedure or inspection, stop the engine, wait five minutes to allow all parts to cool. Disconnect the spark plug wire, keeping it away from the spark plug. Disconnect the Battery Terminals (Electric start only).

Regular Maintenance Checklist

Procedure	Before Each Use	Every 3 Hours	Every 25 Hours	Every 100 Hours
Check engine oil level	Δ			
Check general equipment condition	Δ			
Check wedge for sharpness	Δ			
Check belts	Δ			
Check tire pressure			Δ	
Clean engine exterior and cooling			Δ	
Change Engine Oil	First time 5 hours		Δ	
Replace air filter			Δ	
Replace spark plug				Δ

Engine Service

Refer to the engine manufacturer's user manual for engine maintenance.

Lubrication

 **NOTICE**

All Bearings of your Chipper are sealed units and should have sufficient lubricant to last the life of your machine with normal use.

Greasing the rack and Pinion

 **NOTICE**

All the rack and pinion should be greased before every use.

PART V: Troubleshooting and Parts List

Most problems are easy to fix. Consult the Troubleshooting Table below for common problems and their solutions. If you continue to experience problems, contact the dealers in your area.

WARNING

Before performing any maintenance procedure or inspection, stop the engine, wait five minutes to allow all parts to cool. Disconnect the spark plug wire, keeping it away from the spark plug.

Troubleshooting Table

SYMPTOM	POSSIBLE CAUSE
<p>The engine won't start.</p> <p>(Please refer to the engine user manual for engine-specific procedures.)</p>	<ul style="list-style-type: none"> ➤ Is the ignition switch in the "ON" position? ➤ Is the fuel shut-off valve on? ➤ Are you using fresh, clean gas? If the gas is old, change it. Use a fuel stabilizer if you keep gas longer than 30 days. Is the spark plug clean? If the spark plug is dirty or cracked, change it. If it's oily, leave it out, hold a rag over the plug hole and pull the recoil cord several times to blow out any oil in the cylinder, then wipe off the plug and reinsert it.
<p>The engine lacks power or is not running smoothly.</p> <p>(Please refer to the engine user manual for engine-specific procedures.)</p>	<ul style="list-style-type: none"> ➤ Check that the Throttle Lever is in the "Run" position. Is the air filter clean? If it's dirty, change it following the procedure in the engine manufacturer's owner's manual. Is the spark plug clean? If it's fouled or cracked, change it. If it's oily, leave it out, hold a rag over the plug hole and pull your recoil cord several times to blow out any oil in the cylinder, then wipe off the plug and reinsert it. ➤ Are you using fresh, clean unleaded gas? If it's old, change it. Use a fuel stabilizer if you keep gas longer than 30 days. Does your engine have the right amount of clean oil? If it's dirty, change it following the procedure in the engine manufacturer's owner's manual. Check the oil level and adjust as needed. Check the oil level and adjust as needed. Check the air filter and clean or replace if needed. You may be using the wrong oil—too light for the temperature. Refer to your Engine Owner's Manual for detailed information. Clean the cooling fins if they're dirty. ➤ ➤
<p>Engine smokes.</p> <p>(Please refer to the engine user manual for engine-specific procedures.)</p>	<ul style="list-style-type: none"> ➤ ➤ ➤
<p>Machine does not seem</p>	<ul style="list-style-type: none"> ➤ The belts may be too loose and slipping. Adjust or replace belts as

<i>to have full chipping power.</i>	<i>need.</i>
-------------------------------------	--------------

Explosion View and parts list

Ref.	Description	pcs	Ref.	Description	pcs
1	Penta-blade rod		41	Wheel 16*8.0-7	
2	Triangle blade		42	Flange	
3	Φ8 washer		43	Seal Φ25*47*7	
4	M10*25 thinhead screw		44	Bearing6205	
5	Bearing 1507		45	Wheel pipe axle	
6	Pulley Φ200		46	Battery box	
7	B-belt 940		47	Baseframe plate	
8	Engine		48	Mouth frame	
9	Adjust plate 4-0		49	Feed rubber	
10	Adjust plat 8-0		50	Foot angle plate	
11	Tow bar		51	Feed hopper	
12	Belt cover		52	Switch valve	
13	Clutch Φ125		53	Speed valve	
14	Washer 2-0		54	Spring	
15	M8*25 screw		55	Cover	
16	Bearing 6306-2RS		56	Short blade spacer	
17	Lock nut M35*1-5		57	Interval rod	
18	Blade push-plate		58	Main axle	
19	Key way 8*7*60		59	Plate blade	
20	Long blade spacer		60	Bearing FL206	
21	Bearing base		61	Pulley A Φ90	
22	Fan plate		62	Belt A Φ500	
23	Blade plate		63	Pin 8*7*30	
24	Anvil		64	Rubber seal	
25	Bottom frame		65	Emergency stop	
26	Switch		66	Hopper block plate	
27	Battery		67	Push bar	
28	Cover fixing plate		68	Pump joint	
29	Rear frame		69	Pump	
30	Rubber pad		70	Pump fixing plate	
31	Oil bean cover		71	Pump pulley	
32	Oil feed filter		72	Ratchet & motor	
33	Chain		73	Top cover	
34	Tank		74	Top body	
35	Oil outlet filter		75	Screw hook	
36	1.5inch interface		76	Bottom discharge	
37	Oil outlet interface		77	Top discharge	
38	Pin Φ3.5*40		78	Fasten handle	
39	Nut M24		79	Reflect cover	
40	Φ25 washer				

